

This manual is only to be used with new Type Thermostat

It discribes how to replace the existing thermostat for the new type thermostat.



1. Existing bracket and new type thermostat.

- 2. Remove the square part of the bracket by drilling out the 2 spotwelds.
- Drill a hole in the bracket where the thermostat hold tap should come. In order to find the right spot, you should use a bit of red paint, and place the thermostat exactly in the middle of the oval hole.

Now you can see where the paint left its mark, drill a small hole here.





4. Mount the thermostat in the right spot using an extra ring (M8)